

SapEM System Setup Guide

Wireless vacuum monitoring for maple sap systems

1. Setup Receiving Hub

1. Install the antenna.
2. Plug in the HDMI cable to the board (either port) and desired display device.
3. Plug in powerblock and turn the switch on (if your version has one).
4. Plug in ethernet (recommended). If not using ethernet, connect the hub to WiFi by clicking the WiFi symbol in the top right corner (mouse not included, can be installed in any USB port).

2. Create SapEM Account

1. On any device (besides the hub) go to concept-solid.com/sapem and click Login in the top right corner.
2. Click Create Account.
3. Follow the directions on screen. Once completed, log in to your dashboard.

3. Connecting Hub to Account

1. Ensure the hub is powered on; wait 5 minutes to ensure setup has completed.
2. On the dashboard, press the "+ Add Hub" button.
3. Enter the number found on the inside of the hub enclosure and add your desired name (name can be changed anytime). Press "Add Hub" and the dashboard will populate.

4. Connecting Sensors to Account

1. Install the antenna.
2. Power on the sensor by pressing in the metal button on the side of the enclosure. Make sure the initial binding is done in close proximity to the hub.
3. Wait 30 seconds, then on the dashboard press the "+ Add Sensor" button.
4. Enter the number found on the inside of the sensor enclosure and your desired name (name can be changed anytime). Press "Add Sensor" and the sensor will populate in the Unclaimed Sensor bin at the bottom of the screen.
5. Press "Assign Sensor" at the top of the screen and select the new sensor and hub you want it paired to, then press "Apply." The process is the same to remove a sensor from a hub and reassign it to a different hub.

Notes

Tip: Wait 30 seconds before turning on more sensors to allow the binding to fully initiate.

Charging: Charge the sensor fully before deploying for a season. The charging port is found in the bottom right corner of the circuit board inside the box (USB-C cable included with every hub). While charging, the small indicator light on the board glows red. Once fully charged, that same light switches to blue — that's your signal it's ready to deploy.

